



SDHQ Offroad Racing
1720 W Elliot Rd
Gilbert, AZ 85233
Phone: 480-633-2929 | Toll Free: 877-969-2929 | Fax: 480-633-1791

INSTALLATION INSTRUCTIONS

Product: *SDHQ-53-1304*

Description: 2007+ Toyota Tundra ABS Guards



<u>Parts List</u>	<u>Hardware List</u>	<u>Required Tools</u>
(2) Driver side ABS guards (2) Passenger side ABS guards	(4) M6-1. X 45 hex bolts (4) M6 flat washers	-10mm socket / wrench -5mm allen wrench

Tech Notes

These guards help protect your vulnerable factory ABS sensors from rocks and debris. Your factory hardware will be replaced with upgraded 10.9 bolts.


*****READ ALL INSTRUCTIONS THOROUGHLY FROM START TO FINISH BEFORE BEGINNING INSTALLATION! *****

Installation Instructions:

1. For the front guards, remove the factory 5mm allen bolt holding the sensor. Install the guard on the appropriate side using the provided hardware and adjust so the bottom plate is parallel to the ground and tighten.



2. For the rear guards, remove the 10mm nut holding the sensor. Pull the sensor out and remove the factory stud. Install the guard on the appropriate side using the provided hardware and adjust so the bottom plate is parallel to the ground and tighten.

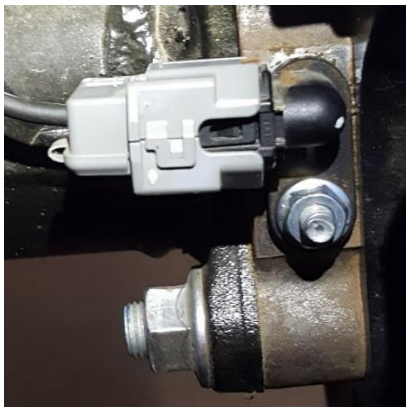

For questions or help with the installation, please call SDHQ Offroad @ 480-633-2929
Mon.-Fri. 8:00am-5:30pm and Sat. 8:00am-3:30pm Arizona Time. www.sdhqoffroad.com

*****Double check all hardware is installed correctly and tight*****

*****Re-torque ALL bolts after 100 miles*****



1720 W Elliot Rd. Gilbert, AZ 85233

Phone: 480-633-2929 | Toll Free: 877-969-2929 | Fax: 480-633-1791

www.sdhqoffroad.com

Follow us on:



Facebook



Instagram

For questions or help with the installation, please call SDHQ Offroad @ 480-633-2929
Mon.–Fri. 8:00am–5:30pm and Sat. 8:00am–3:30pm Arizona Time. www.sdhqoffroad.com